


## **Installation Instructions:**

## **WIRING EXISTING GATES**

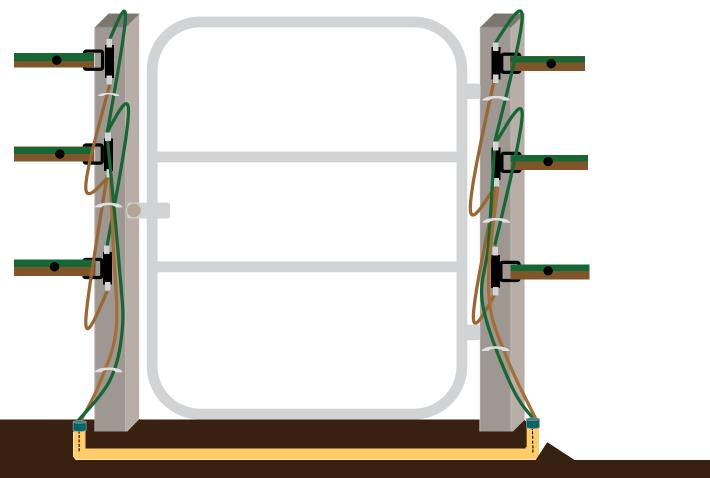



#BP37 Tensioner





**#BP32 Small Tensioner** 

## **Existing Wooden or Metal Gates**

An electric loop is not necessary with our bi-polar system. Any installation shape will work (U shape, straight line fence, etc.) if connected to your fence charger. From the existing second gate, the circuit is continued by running cables under the gate connected to tensioners at each row. During the winter, just unplug the lower tape when it's under snow to avoid shorts. Leave the upper tapes ON and then in spring reconnect the lower tape.